

**MOUNTING PROCEDURE**


**KIT LICENCE PLATE**  
**HONDA HORNET 600 2003 - 2006**

**HN6104/03-BN**

[WWW.BARRACUDAMOTO.COM](http://WWW.BARRACUDAMOTO.COM)

**KIT**

X2. NUT Ø 8  
X2. RUBBER WASHER  
X1. LITTLE RUBBER ADHESIVE SQUARE  
X1. LICENCE PLATE BARRACUDA

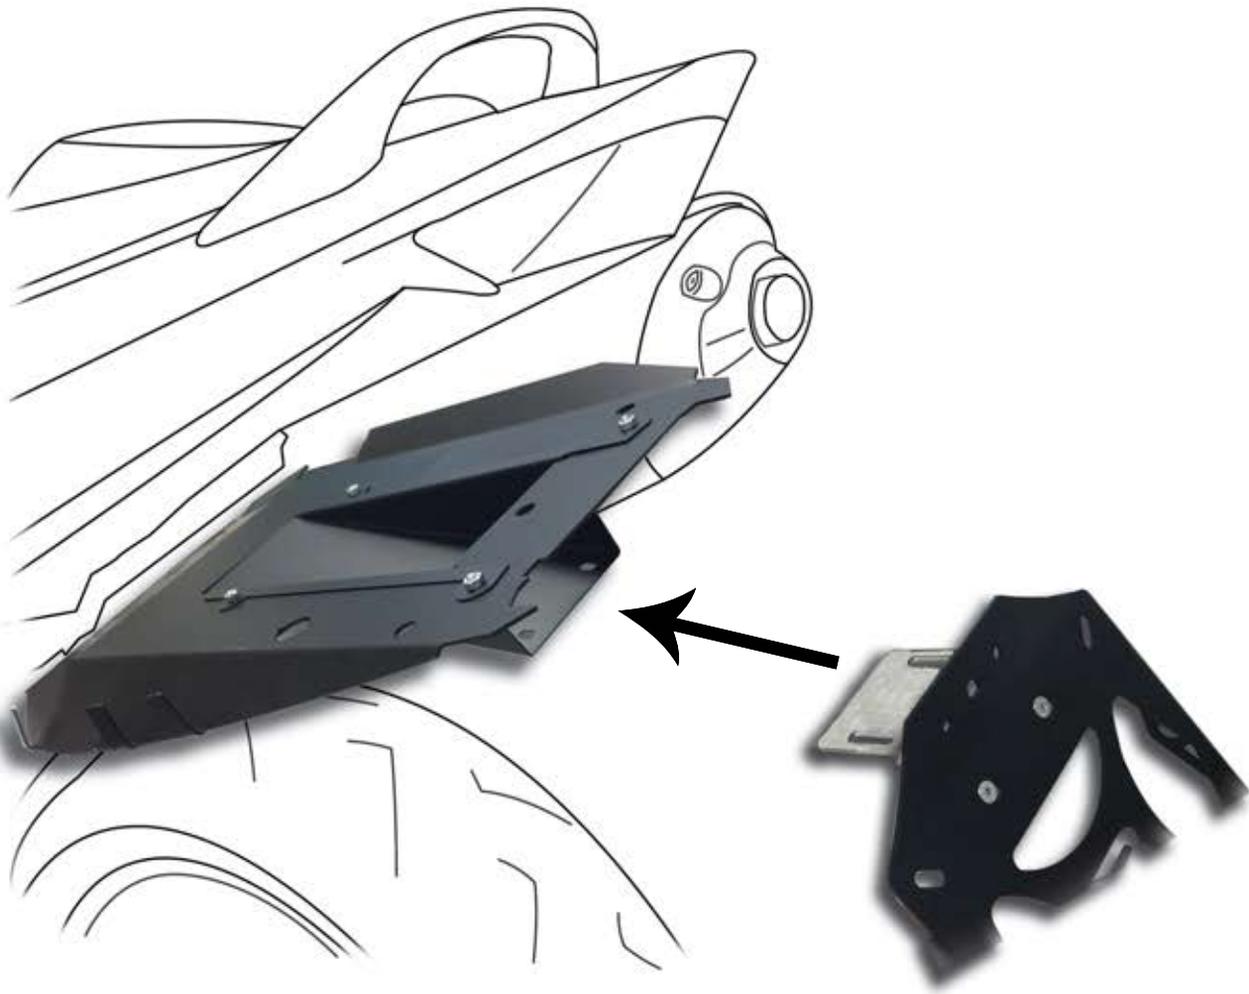

REMOVE THE ORIGINAL PLASTIC UNDERTAIL.

INSTALL THE BARRACUDA ALUMINIUM UNDERTAIL.

FIX THE LOWER PART OF UNDERTAIL WITH THE LIQUID-BOWL SCREW (IMPORTANT: DON'T CLOSE STRONGLY BUT TIGHTEN THE SCREW AND STOP IT WITH THREADLOCKER).

USE THE SCREW HANDLE-HOLDER TO FIX THE HIGHER PART OF UNDERTAIL, FIXING ALL WITH THE TWO NUTS INCLUDED .

PUT THE TWO RUBBER WASHERS INCLUDED TO THE HULL PLASTIC OF MOTORBIKE AND THAN FIX THE LICENCE PLATE LIKE THE PICTURE.

WHEN YOU FINISH THE MOUNTING OPERATION, YOU HAVE TO INSULATE THE INSIDE OF UNDERTAIL TO AVOID DIRTY AND WATER INFILTRATION, SO USE BLACK INSULATING SCOTCH BETWEEN THE FRAME AND THE UNDERTAIL SHAPE.

WE ADVICE AN INCLINATION NOT EXCEEDING TO 30° TO AVOID SANCTIONS AND POSSIBLE DAMAGES.