

## MOUNTING PROCEDURE

## KIT

- X1. UNDERTAIL
- X1. BRACKET FOR BATTERY
- X1. BRACKET FOR LOCK
- X1. LED TAIL LIGHT
- X1. ABS COVER
- X1. "X" TARGA



KIT LICENCE PLATE  
HONDA HORNET 600 2007 - 2009

**HN6104/07-BN**


[WWW.BARRACUDAMOTO.COM](http://WWW.BARRACUDAMOTO.COM)

- REMOVE THE ORIGINAL LICENCE PLATE WITH ALL UNDERTAIL. INSERT THE BARRACUDA UNDERTAIL AND FIX IT WITH THE 6X16 SCREWS AND DIAMETER 6 WASHERS USING THE BATTERY BRACKET.
- POSITION THE TWO DIAMETER 8 WASHERS BETWEEN THE UNDERTAIL AND THE BRACKET.
- USE THE TWO RUBBER ADHESIVE STRIPES TO REST THE BATTERY. USE TWO DIAMETER 4 NUTS TO FIX THE UNIT LIKE THE PICTURE HERE ON THE SIDE.
- FIX THE LOCK BRACKET WITH 5X8 WASHER AND THE DIAMETER 5 NUTS INSIDE, SO INSERT THE LOCK.
- FIX THE JUNCTION BRACKET IN THE FINAL PART OF MOTORBIKE AND THAN APPLY THE BARRACUDA LICENCE PLATE USING THE 6X16 SCREWS ON THE FRAME AND 5X10 SCREW INTO THE CENTRAL HOLES PUTTING THE DIAMETER 5 NUTS INSIDE LIKE THE PICTURE HERE BELOW.

**ATTENTION:**  
THE CENTRAL HOLE IS FOR THE CABLES AND BEFORE FIX THE LED TAIL LIGHT, FIX THE TWO ORIGINAL SIDES.  
JOIN ALL THE CABLES FOR THE LED TAIL LIGHT, INDICATORS, LED LICENCE PLATE WORK.  
IN THE END FIX THE ABS COVER IMBED BETWEEN THE TWO SIDES.

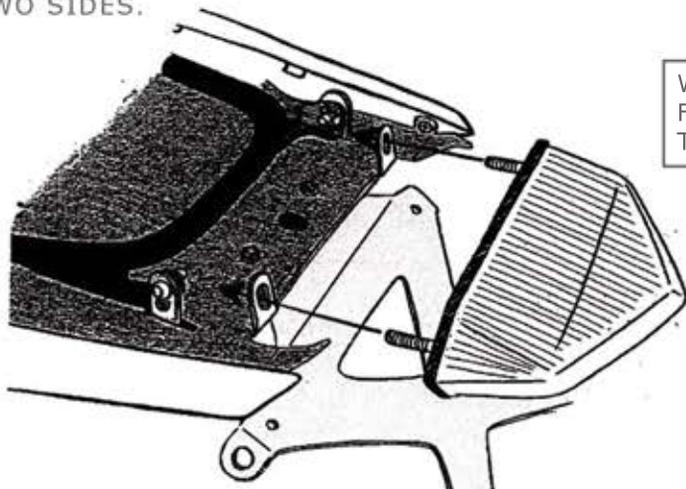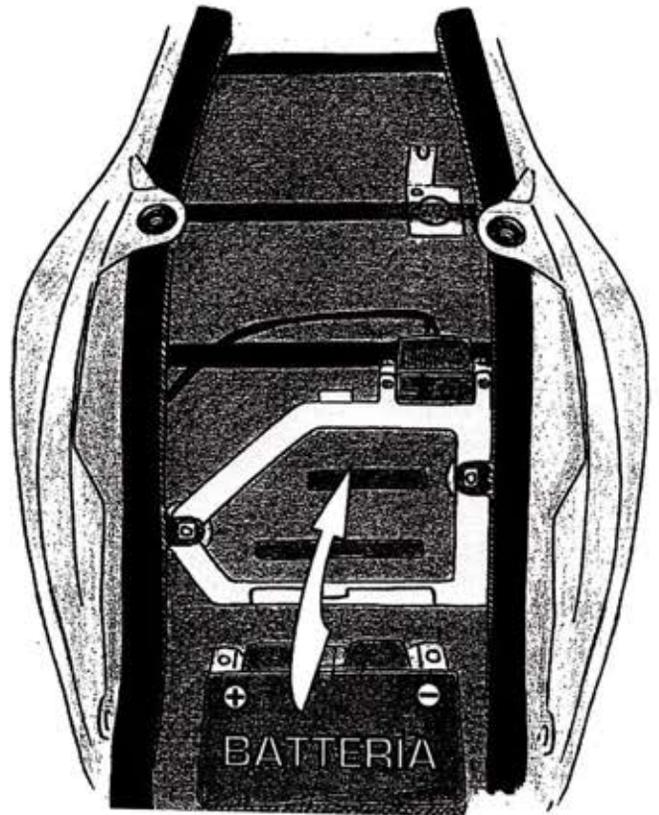

WE ADVISE TO USE A FEW HOT GLUE TO FIX THE ABS COVER

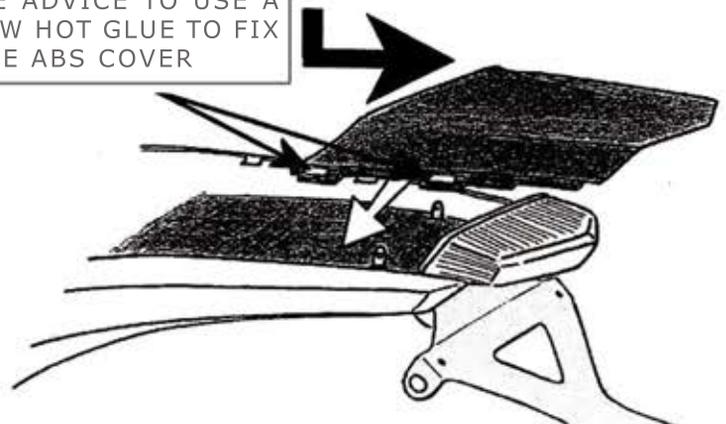

WE ADVISE AN INCLINATION NOT EXCEEDING TO 30° TO AVOID SANCTIONS AND POSSIBLE DAMAGES.